SIP Setup

Change authentication to Basic to ensure username and password match HTTP API Settings in **System Design in Control4 Composer**. This username and password is not the same as UI credentials.

Setting HTTP API		
∘ Time/Lang	Enabled	
∘ Key/Display	Authorization Mode	Basic 💌
Action	Username	admin
Action URL	Password	
o Schedule	1st IP	
	2nd IP	
• HTTP API	3rd IP	
Properties Actions Documentation Lua		
IP Address	192.168.10.100	
	IP Address of the Akuvox X912	
HTTP API Username	admin	
\ \	Username for the Akuvox X912's HTTP AP	I (Basic Authentication Only)
HTTP API Password	*****	
	Password for the Akuvox X912's HTTP AP	(Basic Authentication Only)
X912 Configured	Yes	
	Whether we have successfully configured	the Akuvox

Once connection is established, **move onto the Actions tab** and click on **Configure X912 SIP Settings**. The username and password for the X912 will be auto added to the device.

nced Pro	perties					
erties	Actions	Documentation	Lua			
Trigger	Relay B					
Trigger	Relay A					
	w- V012					

AKUVOX X9	12K		English
		Device Info	
		Model	X912K
(())		Hardware Version	912.1
Cel An Normalia	F	Firmware Version	912.30.10.227
1 2 3 4 5 6		MAC Address	0C11052564DA
789		IP Address	192.168.10.100
		Account1	Registered/304312927
		Account2	Registered/X912
			More >

Confirm SIP Connectivity at the X912's Device Info Page here

or go to Status -> Info Section



Camera Setup

Change authentication to **Basic** to ensure username and password match to Camera Settings in **Control4 Composer System Design**.

Ŧ	Account	•	RTSP Basic				
Ŷ	Network	•		Enabled			
S.	Intercom	•		RTSP Authorization Enabled	\mathbf{N}		
Q	Surveillance	•		MJPEG Authorization Enabled			
	DTOD			Authentication Mode		Basic	•
•	RISP			Username		admin	
٥	Motion			Password		•••••	

Ensure username and password match to Camera Settings in <u>Control4 Composer System</u> <u>Design</u>.

Akuvox X912	
- 🖓 Akuvox X912 Camera	
Akuvox X912 Intercom	✓
System Design	
7	Camera Properties Camera Test
	Address
	Hostname / IP Address: 192.168.10.100 Set
	HTTP Port 8080 Set
	HTTPS Port 443 Set
\mathbf{X}	RTSP (H.264) Port 554 Set
	Snapshot Refresh Rate: 60 Sec. Set
	Publicly Accessible:
	Use HTTPS:
	Authentication
	Haarpare atrain
	Type. Dasic v
	Aspect Ratio: 16x9 ~
	Load Defaults Help

Call Button Setup

Ensure you select the correct Group to call within the **Control4 Composer Communications Agent**

Agents		_
Agents	Add Remov	e
Advanced Lighting		^
Announcements		
Backup		
Color		
Communication		
Custom Buttons		\sim
Groups All	Rename Dele	te < >
System Design		
♂ Connections		
> Media		
🛟 Agents		

Add the Call Button (Type it in) and ensure the label matches the Call group within the Communications Agent in Control4 Composer depicted above. In this case, the **"All"** is the Call Group being used.

🖑 Directory 🗸	Key on Homepage of the I	Building Theme				
📕 Device 🗸 🗸	Index	Туре		Name		Number
A Calling	1	Directory	•	Directory		
₩ Setung ▲	2	PIN	•	PIN		
∘ Time/Lang	3	Speed Dial	•	Control4	×	All
• Key/Display		\sim				
	Speed Dial S	etting				
	Account			Account2	▼	
	Open Relay			None	•	
	Action To Execu	ite		HTTP		

Test the button from the touchscreen. The "All" SIP Call Group Speed Dial name will appear as labeled (Control4 in this case) at the X912 main screen. Ensure you select "Account2" for the Speed Dial Settings, which is the same account used to communicate with the Control4 SIP Server.



Akuvox X912 Akuvox X912 Akuvox X912	Camera Intercom			
🕀 🔄 First Level		\sim		
System Design	-			
Custom Buttons	- - - - Device I	Custom Bu	uttons Custom Butt tton Label Custom Butt tton Label Pr	on 1 Button One on 2 Button Two

_

Valid User	\sim
Button One' UI Button Pressed	
Button Two' UI Button Pressed	
nput A Triggered	
nput B Triggered	
nput C Triggered	
nvalid User	
Motion Sensor Triggered	
Relay A Triggered	
Relay B Triggered	

Available Events